



Awning Sash Installation

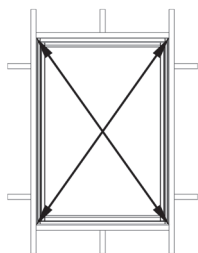


Step 1: BEFORE INSTALLING SASH

Measure the diagonals of the awning window with a measuring tape. It is important for the correct operation of this product, that the tolerance does not exceed 4mm.

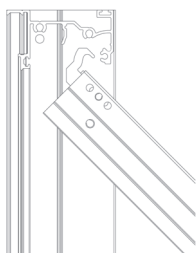


Step 2: ORIENTATE SASH

The Sash must be installed from the outside face of the window. Make sure that the sash hooks are located at the top of the sash and pointing outside.

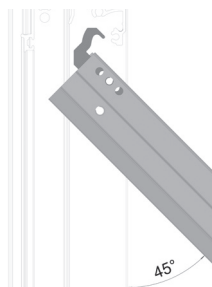

Step 3: POSITION SASH IN OPENING


Angle the sash at 45° and lift the sash into position.

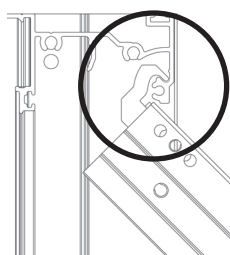

Step 4: HOOK IN SASH

Hook the sash into the Head/Transom (indicated in diagram). Make sure that the sash is properly hooked in, before gently lowering the sash and closing the opening.

Sash must be centralised to ensure hook screw is not broken while lowering the sash into position.

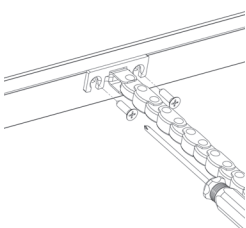

Step 5: FIX WINDER TO SASH

Hook the winder over the two screws on the sash (indicated in inset). Secure the winder to the sash with Phillips Head screwdriver. It may be easier to fix the screws if the winder is first removed from the window frame (to improve access to screws).

PLEASE NOTE: The Sash must be fitted prior to nailing window in place on any Second Story.